




# Nikon Coolpix S51c Battery Replacement

How to take out the battery to either replace it or charge it.

Written By: Ryan

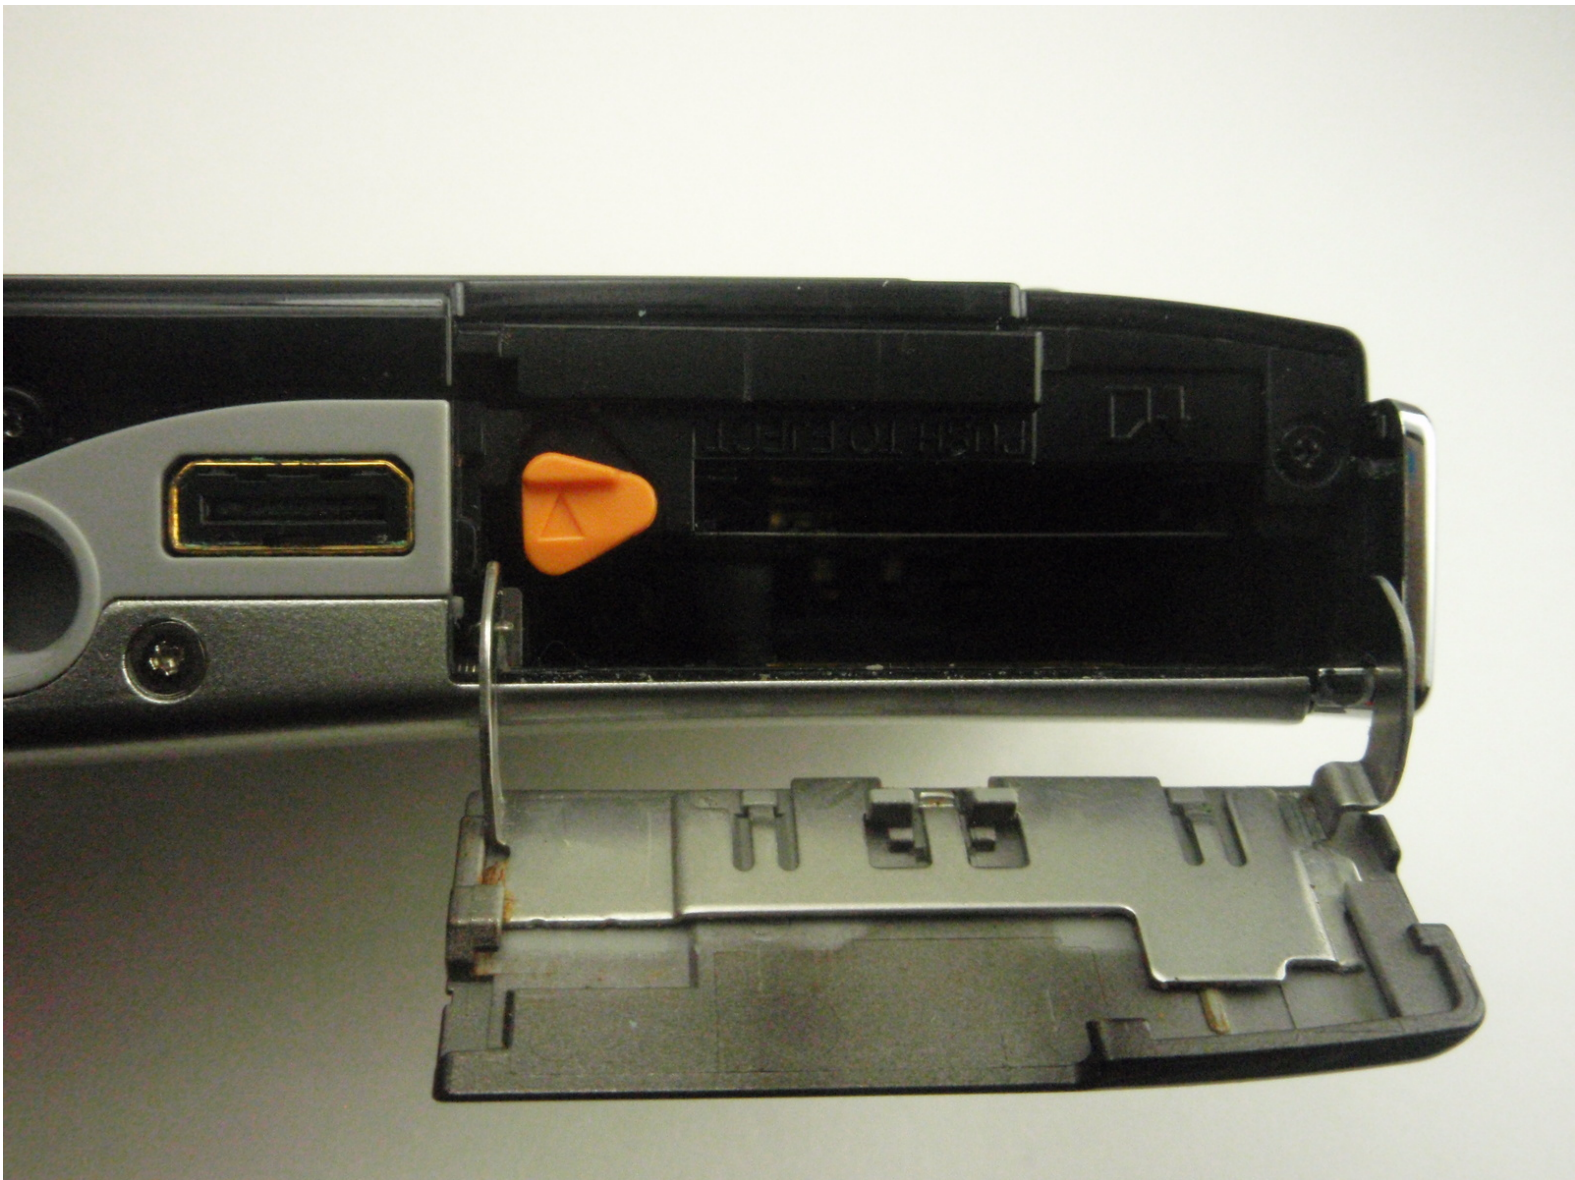

## INTRODUCTION

How to take out the battery to either replace it or charge it.

---



### TOOLS:

- [Spudger](#) (1)
-

## Step 1 — Battery



- Turn the camera upside down to find the battery door.


## Step 2



- Slide the battery door in the direction of the arrow, toward the LCD screen. The door will then swing open.



## Step 3

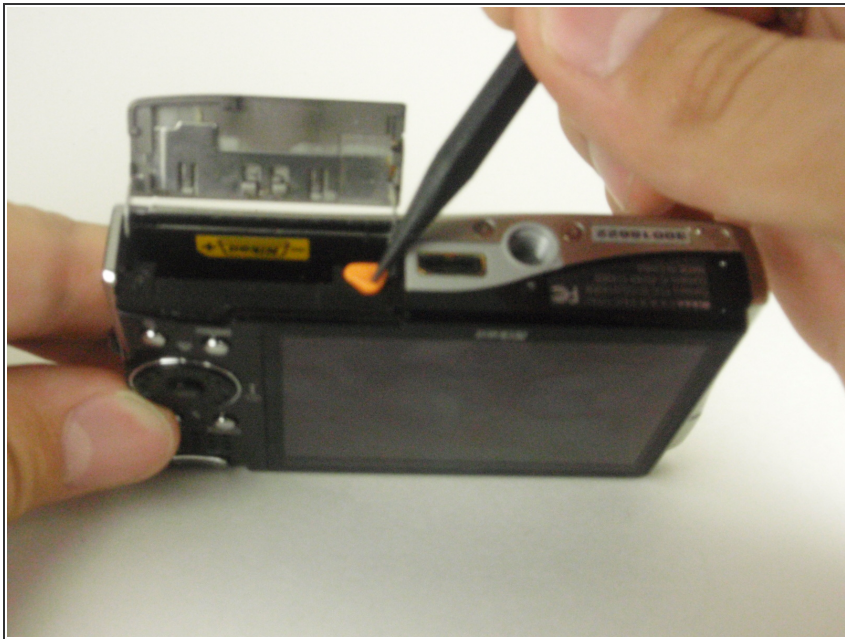

- Push the orange release mechanism with the spudger in the direction of the arrow, freeing the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 05:31:32 PM.